

# Technical Accessory Guides (TAGs)

For Associates, Resellers, ISVs and Alliance Partners

Global



Version: All

Will show products that are known to be available for sale and discontinued products along with suggested replacements, when known

Need to provide an update or change?

Contact <mailto:pgw786@zebra.com>



For Internal Use by  
**PartnerConnect Members Only**



# RFD40 Technical Accessory Guide






NOTE: This document is only for general reference. Solutions Pathway and related PMBs should be used for product availability, pricing, and final solution selection.




\* Zebra does not endorse or specifically recommend any **third-party products, accessories, or hardware**. ZEBRA DISCLAIMS ANY AND ALL LIABILITY, INCLUDING ANY EXPRESS OR IMPLIED WARRANTIES, WHETHER ORAL OR WRITTEN, FOR SUCH THIRD PARTY PRODUCTS, ACCESSORIES, OR HARDWARE. THE CUSTOMER ACKNOWLEDGES THAT NO REPRESENTATION HAS BEEN MADE BY ZEBRA AS TO THE FITNESS OF THE THIRD-PARTY PRODUCTS, ACCESSORIES, OR HARDWARE FOR THE CUSTOMER'S INTENDED PURPOSE.

## Cradles and Charging




### Single Device - Charge-Only





Part Number	Picture	Description	Notes	Required Items
CRD1S0T-RFD40-EC5X-CHG-1R		Single Slot Charging ShareCradle - RFD40 and EC50/EC55	<ul style="list-style-type: none"> <li>▶ Cradle will charge both RFD40 and EC50/EC55 and supports:               <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- EC50/EC55 charging by itself</li> <li>- Both RFD40 and EC50/EC55 when attached together</li> </ul> </li> <li>▶ Does not charge spare batteries.</li> <li>▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>▶ P/N on cradle is: C1S0T40EC5G</li> </ul>	<b>For charging one cradle:</b> <ul style="list-style-type: none"> <li>▶ Power Supply (PWR-BGA12V50W0WW)</li> <li>▶ DC Line Cord (CBL-DC-388A1-01)</li> <li>▶ AC Line Cord (23844-00-00R or country specific version)</li> </ul> <b>For charging up to 4 cradles from one power supply:</b> <ul style="list-style-type: none"> <li>▶ Power Supply (PWR-BGA12V108W0WW)</li> <li>▶ 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>▶ AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CRD1S0T-RFD40-TC2X-CHG-1R		Single Slot Charging ShareCradle - RFD40 and TC21/TC26	<ul style="list-style-type: none"> <li>▶ Cradle will charge both RFD40 and TC21/TC26 and supports:               <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC21/TC26 charging by itself</li> <li>- Both RFD40 and TC21/TC26 when attached together</li> </ul> </li> <li>▶ Does not charge spare batteries.</li> <li>▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>▶ P/N on cradle is: C1S0T40TC2G1</li> </ul>	<b>For charging one cradle:</b> <ul style="list-style-type: none"> <li>▶ Power Supply (PWR-BGA12V50W0WW)</li> <li>▶ DC Line Cord (CBL-DC-388A1-01)</li> <li>▶ AC Line Cord (23844-00-00R or country specific version)</li> </ul> <b>For charging up to 4 cradles from one power supply:</b> <ul style="list-style-type: none"> <li>▶ Power Supply (PWR-BGA12V108W0WW)</li> <li>▶ 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>▶ AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CR40-1S0T-TC2-G-02		Single Slot Charging ShareCradle - RFD40 and TC22/TC27 or HC20/HC50	<ul style="list-style-type: none"> <li>▶ Cradle will charge both RFD40 and TC22/TC27 or HC20/HC50 and supports:               <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC22/TC27 or HC20/HC50 charging by itself</li> <li>- Both RFD40 and TC22/TC27 or HC20/HC50 when attached together</li> </ul> </li> <li>▶ Does not charge spare batteries.</li> <li>▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	<b>For charging one cradle:</b> <ul style="list-style-type: none"> <li>▶ Power Supply (PWR-BGA12V50W0WW)</li> <li>▶ DC Line Cord (CBL-DC-388A1-01)</li> <li>▶ AC Line Cord (23844-00-00R or country specific version)</li> </ul> <b>For charging up to 4 cradles from one power supply:</b> <ul style="list-style-type: none"> <li>▶ Power Supply (PWR-BGA12V108W0WW)</li> <li>▶ 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>▶ AC Line Cord (23844-00-00R or country specific version)</li> </ul>






CR40-1S0T-TC5-G-01		Single Slot Charging ShareCradle - RFD40 and TC51/TC52/TC56/TC57	<p>► Cradle will charge both RFD40 and TC5X and supports:</p> <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC5X charging by itself</li> <li>- Both RFD40 and TC51/TC52/TC52x/TC52ax/TC56/TC57/TC57x unit when attached together</li> </ul> <p>► Does not charge spare batteries.</p> <p>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</p> <p>► Not compatible with TC53/TC58 series.</p>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WWW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CR49-1S0T-TC5-G-02		Single Slot Charging ShareCradle - RFD40/RFD90 and TC53/TC58	<p>► Cradle will charge both RFD40/RFD90 and TC53/TC58 and supports:</p> <ul style="list-style-type: none"> <li>- RFD40/RFD90 charging by itself</li> <li>- TC53/TC58 charging by itself</li> <li>- Both RFD40/RFD90 and TC53/TC58 unit when attached together</li> </ul> <p>► Does not charge spare batteries.</p> <p>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</p> <p>► Not compatible with legacy TC5X series.</p>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WWW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CRD1S0T-RFD49-UNIV-CHG-1R		Single Slot Charging ShareCradle - Universal/3rd Party	<p>► Cradle will charge RFD40/RFD90.</p> <p>► Does not charge spare batteries.</p> <p>► Includes USB-A port on rear of cradle cup which can be used to charge third party devices.</p> <p>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</p> <p>► P/N on cradle is: C1S0T49UNIG1</p>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WWW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CRD1S0T-RFD49-BASE-CHG-1R		Single Slot Charging ShareCradle Base	<p>► Includes Charge-Only Base for attaching Cradle cup.</p> <p>► Does not charge spare batteries.</p> <p>► NOTE: Base accepts Charging cups using enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</p> <p>► P/N on cradle is: C1S0T49BASG1</p>	<p>► Cradle Cup</p> <p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WWW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
Single Device - Charge and Communication				
Part Number	Picture	Description	Notes	Required Items




CRD1S0T-RFD40-EC5X-COM-1R		Single Slot Charge-Communication ShareCradle RFD40 and EC50/EC55	<ul style="list-style-type: none"> <li>► Cradle will charge both RFD40 and EC50/EC55 and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- EC50/EC55 charging by itself</li> <li>- Both RFD40 and EC50/EC55 when attached together</li> </ul> </li> <li>► Also provides USB communication to RFD40, not EC50/EC55.</li> <li>► Does not charge spare batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C1S0T40EC5M1</li> </ul>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WWW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> <li>► USB Cable (25-124330-01R) for PC connection</li> </ul>
CRD1S0T-RFD40-TC2X-COM-1R		Single Slot Charge-Communication ShareCradle RFD40 and TC21/TC26	<ul style="list-style-type: none"> <li>► Cradle will charge both RFD40 and TC21/TC26 and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC21/TC26 charging by itself</li> <li>- Both RFD40 and TC21/TC26 when attached together</li> </ul> </li> <li>► Also provides USB communication to RFD40, not TC21/TC26.</li> <li>► Does not charge spare batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C1S0T40TC2M1</li> </ul>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WWW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> <li>► USB Cable (25-124330-01R) for PC connection</li> </ul>
CR40-1S0T-TC2-M-02		Single Slot Charge-Communication ShareCradle RFD40 and TC22/TC27 or HC20/HC50	<ul style="list-style-type: none"> <li>► Cradle will charge both RFD40 and TC21/TC26 or HC20/HC50 and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC22/TC27 or HC20/HC50 charging by itself</li> <li>- Both RFD40 and TC22/TC27 or HC20/HC50 when attached together</li> </ul> </li> <li>► Also provides USB communication to RFD40, not TC21/TC26/HC20/HC50.</li> <li>► Does not charge spare batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WWW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> <li>► USB Cable (25-124330-01R) for PC connection</li> </ul>







CR40-1S0T-TC5-M-01		Single Slot Charge-Communication ShareCradle RFD40 and TC51/TC52/TC56/TC57	<ul style="list-style-type: none"> <li>► Cradle will charge both RFD40 and TC51/TC52/TC56/TC57 and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC5X charging by itself</li> <li>- Both RFD40 and TC51/TC52/TC52x/TC52ax/TC56/TC57/TC57x unit when attached together</li> </ul> </li> <li>► Also provides USB communication to RFD40, not TC5X.</li> <li>► Does not charge spare batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► Not compatible with TC53/TC58 series.</li> </ul>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> <li>► USB Cable (25-124330-01R) for PC connection</li> </ul>
CR49-1S0T-TC5-M-02		Single Slot Charge-Communication ShareCradle RFD40/RFD90 and TC53/TC58	<ul style="list-style-type: none"> <li>► Cradle will charge both RFD40/RFD90 and TC53/TC58 and supports: <ul style="list-style-type: none"> <li>- RFD40/RFD90 charging by itself</li> <li>- TC53/TC58 charging by itself</li> <li>- Both RFD40/RFD90 and TC53/TC58 unit when attached together</li> </ul> </li> <li>► Also provides USB communication to RFD40/RFD90, not TC53/TC58.</li> <li>► Does not charge spare batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► Not compatible with legacy TC5X series.</li> </ul>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> <li>► USB Cable (25-124330-01R) for PC connection</li> </ul>
CRD1S0T-RFD49-UNIV-COM-1R		Single Slot Charge-Communication ShareCradle Universal/3rd Party	<ul style="list-style-type: none"> <li>► Cradle will charge RFD40/RFD90.</li> <li>► Also provides USB communication to RFD40/RFD90.</li> <li>► Does not charge spare batteries.</li> <li>► Includes USB-A port on rear of cradle cup which can be used to charge third party devices.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C1S0T49UNIM1</li> </ul>	<p><b>For charging one cradle:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> <p><b>For charging up to 4 cradles from one power supply:</b></p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> <li>► USB Cable (25-124330-01R) for PC connection</li> </ul>

CRD1S0T-RFD49-BASE-COM-1R		Single Slot Charge + Communication ShareCradle Base	<ul style="list-style-type: none"> <li>► Includes Charge + Communication Base for attaching Cradle cup.</li> <li>► Does not charge spare batteries.</li> <li>► NOTE: Base accepts Charging cups using enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C1S0T49BASM1</li> </ul>	<ul style="list-style-type: none"> <li>► Cradle Cup</li> <li><b>For charging one cradle:</b> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WWW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> </li> <li><b>For charging up to 4 cradles from one power supply:</b> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► 4-Way DC Line Cord (CBL-DC-380A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul> </li> <li>► USB Cable (25-124330-01R) for PC connection</li> </ul>
Multi-Device - Charge-Only				
Part Number	Picture	Description	Notes	Required Items
CRD3S4T-RFD40-EC5X-CHG-1R		Multi-Slot Charging ShareCradle - RFD40 and EC50/EC55	<ul style="list-style-type: none"> <li>► Cradle will charge up to three RFD40 and EC50/EC55 pairings and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- EC50/EC55 charging by itself</li> <li>- Both RFD40 and EC50/EC55 when attached together</li> </ul> </li> <li>► Also charges up to four spare RFD40 batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C3S4T40EC5G1</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CRD3S4T-RFD40-TC2X-CHG-1R		Multi-Slot Charging ShareCradle - RFD40 and TC21/TC26	<ul style="list-style-type: none"> <li>► Cradle will charge up to three RFD40 and TC21/TC26 pairings and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC21/TC26 charging by itself</li> <li>- Both RFD40 and TC21/TC26 when attached together</li> </ul> </li> <li>► Also charges up to four spare RFD40 batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C3S4T40TC2G1</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
CR40-3S4T-TC2-G-02		Multi-Slot Charging ShareCradle - RFD40 and TC22/TC27 or HC20/HC50	<ul style="list-style-type: none"> <li>► Cradle will charge both RFD40 and TC21/TC26 or HC20/HC50 and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC22/TC27 or HC20/HC50 charging by itself</li> <li>- Both RFD40 and TC22/TC27 or HC20/HC50 when attached together</li> </ul> </li> <li>► Also charges up to four spare RFD40 batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>




CR40-3S4T-TC5-G-01		Multi-Slot Charging ShareCradle - RFD40 and TC51/TC52/TC56/TC57	<ul style="list-style-type: none"> <li>► Cradle will charge up to three RFD40 and TC5X pairings and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC5X charging by itself</li> <li>- Both RFD40 and TC51/TC52/TC56/TC57 when attached together</li> </ul> </li> <li>► Also charges up to four spare RFD40 batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► Not compatible with TC53/TC58 series.</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00P or country specific version)</li> </ul>
CR49-3S4T-TC5-G-02		Multi-Slot Charging ShareCradle - RFD40/RFD90 and TC53/TC58	<ul style="list-style-type: none"> <li>► Cradle will charge up to three RFD40/RFD90 and TC53/TC58 pairings and supports: <ul style="list-style-type: none"> <li>- RFD40/RFD90 charging by itself</li> <li>- TC53/TC58 charging by itself</li> <li>- Both RFD40/RFD90 and TC53/TC58 when attached together</li> </ul> </li> <li>► Also charges up to four spare RFD40/RFD90 batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► Not compatible with legacy TC5X series.</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00P or country specific version)</li> </ul>
CRD3S4T-RFD49-UNIV-CHG-1R		Multi-Slot Charging ShareCradle with Spare Battery Charging - Universal/3rd Party	<ul style="list-style-type: none"> <li>► Cradle will charge up to three RFD40/RFD90 units.</li> <li>► Also charges up to four spare RFD40/RFD90 batteries.</li> <li>► Includes USB-A port on rear of cradle cups which can be used to charge third party devices.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C3S4T49UNIG1</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00P or country specific version)</li> </ul>
CR49-4S0T-UNI-G-01		Multi-Slot Charging ShareCradle - Universal/3rd Party	<ul style="list-style-type: none"> <li>► Cradle will charge up to four RFD40/RFD90 units.</li> <li>► Includes USB-A port on rear of cradle cups which can be used to charge third party devices.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00P or country specific version)</li> </ul>
CRD3S4T-RFD49-BASE-CHG-1R		Multi-Slot Charging ShareCradle Base	<ul style="list-style-type: none"> <li>► Charge-Only Base for attaching up to three Cradle cups.</li> <li>► Includes pre-installed 4-Slot Battery Charger for charging up to four spare RFD40/RFD90 batteries.</li> <li>► NOTE: Base accepts Charging cups using enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C3S4T49BASG1</li> </ul>	<ul style="list-style-type: none"> <li>► Three Cradle Cups</li> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
Multi-Device - Charge and Ethernet				

Part Number	Picture	Description	Notes	Required Items
CRD3S4T-RFD40-EC5X-COM-1R		Multi-Slot Charge + Ethernet ShareCradle - RFD40 and EC50/EC55	<ul style="list-style-type: none"> <li>► Cradle will charge up to three RFD40 and EC50/EC55 pairings and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- EC50/EC55 charging by itself</li> <li>- Both RFD40 and EC50/EC55 when attached together</li> </ul> </li> <li>► Also provides Ethernet communications to each RFD40 to enable management, firmware updating and device health.</li> <li>► Charges up to four spare RFD40 batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C3S4T40EC5M1</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00P or country specific version)</li> </ul>
CRD3S4T-RFD40-TC2X-COM-1R		Multi-Slot Charge + Ethernet ShareCradle - RFD40 and TC21/TC26	<ul style="list-style-type: none"> <li>► Cradle will charge up to three RFD40 and TC21/TC26 pairings and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC21/TC26 charging by itself</li> <li>- Both RFD40 and TC21/TC26 when attached together</li> </ul> </li> <li>► Also provides Ethernet communications to each RFD40 to enable management, firmware updating and device health.</li> <li>► Charges up to four spare RFD40 batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C3S4T40TC2M1</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00P or country specific version)</li> </ul>
CR40-3S4T-TC2-M-02		Multi-Slot Charge + Ethernet ShareCradle - RFD40 and TC22/TC27 or HC20/HC50	<ul style="list-style-type: none"> <li>► Cradle will charge both RFD40 and TC21/TC26 or HC20/HC50 and supports: <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC22/TC27 or HC20/HC50 charging by itself</li> <li>- Both RFD40 and TC22/TC27 or HC20/HC50 when attached together</li> </ul> </li> <li>► Also provides Ethernet communications to each RFD40 to enable management, firmware updating and device health.</li> <li>► Charges up to four spare RFD40 batteries.</li> <li>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	<ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V108W0WWW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00P or country specific version)</li> </ul>

CR40-3S4T-TC5-M-01		Multi-Slot Charge + Ethernet ShareCradle - RFD40 and TC51/TC52/TC56/TC57	<p>► Cradle will charge up to three RFD40 and TC5X pairings and supports:</p> <ul style="list-style-type: none"> <li>- RFD40 charging by itself</li> <li>- TC5X charging by itself</li> <li>- Both RFD40 and TC51/TC52/TC56/TC57 when attached together</li> </ul> <p>► Also provides Ethernet communications to each RFD40 to enable management, firmware updating and device health.</p> <p>► Charges up to four spare RFD40 batteries.</p> <p>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</p> <p>► Not compatible with TC53/TC58 series.</p>	<p>► Power Supply (PWR-BGA12V108W0WW)</p> <p>► DC Line Cord (CBL-DC-382A1-01)</p> <p>► AC Line Cord (23844-00-00F or country specific version)</p>
CR49-3S4T-TC5-M-02		Multi-Slot Charge + Ethernet ShareCradle - RFD40/RFD90 and TC53/TC58	<p>► Cradle will charge up to three RFD40/RFD90 and TC53/TC58 pairings and supports:</p> <ul style="list-style-type: none"> <li>- RFD40/RFD90 charging by itself</li> <li>- TC53/TC58 charging by itself</li> <li>- Both RFD40/RFD90 and TC53/TC58 when attached together</li> </ul> <p>► Also provides Ethernet communications to each RFD40/RFD90 to enable management, firmware updating and device health.</p> <p>► Charges up to four spare RFD40/RFD90 batteries.</p> <p>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</p> <p>► Not compatible with legacy TC5X series.</p>	<p>► Power Supply (PWR-BGA12V108W0WW)</p> <p>► DC Line Cord (CBL-DC-382A1-01)</p> <p>► AC Line Cord (23844-00-00F or country specific version)</p>
CRD3S4T-RFD49-UNIV-COM-1R		Multi-Slot Charge + Ethernet ShareCradle - Universal/3rd Party	<p>► Cradle will charge up to three RFD40/RFD90 units.</p> <p>► Also provides Ethernet communications to each RFD40/RFD90 to enable management, firmware updating and device health.</p> <p>► Charges up to four spare RFD40/RFD90 batteries.</p> <p>► Includes USB-A port on rear of cradle cups which can be used to charge third party devices.</p> <p>► NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</p> <p>► P/N on cradle is: C3S4T49UNIM1</p>	<p>► Power Supply (PWR-BGA12V108W0WW)</p> <p>► DC Line Cord (CBL-DC-382A1-01)</p> <p>► AC Line Cord (23844-00-00F or country specific version)</p>


CRD3S4T-RFD49-BASE-COM-1R		Multi-Slot Charge + Ethernet ShareCradle Base	<ul style="list-style-type: none"> <li>► Charge + Communication Base for attaching up to three Cradle cups.</li> <li>► Also provides Ethernet communications to each RFD40/RFD90 to enable management, firmware updating and device health.</li> <li>► Includes pre-installed 4-Slot Battery Charger for charging up to four spare RFD40/RFD90 batteries.</li> <li>► NOTE: Base accepts Charging cups using enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► P/N on cradle is: C3S4T49BASM1</li> </ul>	<ul style="list-style-type: none"> <li>► Three Cradle Cups</li> <li>► Power Supply (PWR-BGA12V108W0WW)</li> <li>► DC Line Cord (CBL-DC-382A1-01)</li> <li>► AC Line Cord (23844-00-00R or country specific version)</li> </ul>
---------------------------	---	---	---	--

#### Cradle Accessories


Part Number	Picture	Description	Notes	Required Items
CUP-RFD40-EC5X-1R		Cradle Cup for RFD40 and EC50/EC55	<ul style="list-style-type: none"> <li>► Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base.</li> <li>► Provides Charge-Only support or Charge+Communications support for an RFD40 and/or EC50/EC55 unit, depending on which Cradle Base type installed on.</li> <li>► Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	ShareCradle Base for RFD40/RFD90
CUP-RFD40-TC2X-1R		Cradle Cup for RFD40 and TC21/TC26	<ul style="list-style-type: none"> <li>► Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base.</li> <li>► Provides Charge-Only support or Charge+Communications support for an RFD40 and/or TC21/TC26 unit, depending on which Cradle Base type installed on.</li> <li>► Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	ShareCradle Base for RFD40/RFD90
CUP-RFD40-TC2X-2R		Cradle Cup for RFD40 and TC22/TC27 or HC20/HC50	<ul style="list-style-type: none"> <li>► Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base.</li> <li>► Provides Charge-Only support or Charge+Communications support for an RFD40 and/or TC22/TC26/HC20/HC50 unit, depending on which Cradle Base type installed on.</li> <li>► Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	ShareCradle Base for RFD40/RFD90



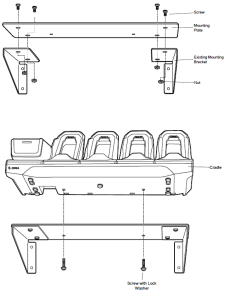


CUP-RFD40-TC5X-1R		Cradle Cup for RFD40 and TC51/TC52/TC56/TC57	<ul style="list-style-type: none"> <li>► Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base.</li> <li>► Provides Charge-Only support or Charge+Communications support for an RFD40 and/or TC51/TC52/TC52x/TC52ax/TC56/TC57/TC57x unit, depending on which Cradle Base type installed on.</li> <li>► Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► Not compatible with TC53/TC58 series.</li> </ul>	ShareCradle Base for RFD40/RFD90
CUP-RFD49-TC5X-2R		Cradle Cup for RFD40/RFD90 and TC53/TC58	<ul style="list-style-type: none"> <li>► Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base.</li> <li>► Provides Charge-Only support or Charge+Communications support for an RFD40/RFD90 and/or TC53/TC58 unit, depending on which Cradle Base type installed on.</li> <li>► Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> <li>► Not compatible with legacy TC5X series.</li> </ul>	ShareCradle Base for RFD40/RFD90
CUP-RFD49-UNIV-1R		Cradle Cup for RFD40/RFD90, Universal/3rd Party	<ul style="list-style-type: none"> <li>► Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base.</li> <li>► Provides Charge-Only support or Charge+Communications support for an RFD40/RFD90 unit, depending on which Cradle Base type installed on.</li> <li>► Includes USB-A port on rear of cup which can be used to charge third party devices.</li> <li>► Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw.</li> </ul>	ShareCradle Base for RFD40/RFD90
BRKT-SCRD-SMRK-01		Multi-Slot ShareCradle Wall/Rack Mount Bracket	<ul style="list-style-type: none"> <li>► Allows for rack and wall mounting of one Multi-Slot ShareCradle or up to four Single-Slot ShareCradles.</li> <li>► Bracket can be mounted on standard 19" network rack or on a wall.</li> <li>► Cable routing slots &amp; removable power supply holder tray.</li> <li>► Adjustable tabs &amp; screw mounts for easy hanging/installation.</li> <li>► Adjustable orientations - horizontal, vertical, angled.</li> <li>► See the Bluetooth-Generic Accessories TAG for info on 3rd party Network Racks that can be used for mounting this bracket.</li> </ul>	



ADP-TC7X-PLT-FX		5-Slot ShareCradle Mounting Bracket Adapter Plate for Honeywell	<p>► Allows Zebra Multi-Slot ShareCradles to be mounted on legacy Honeywell Flex Cradle Wall Mount Brackets (HON SKU #203-641-002).</p> <p>► Includes hardware to attach plate to HON wall bracket and secure ShareCradle to plate.</p> <p>► <b>NOTE:</b> This is a custom product. Please work with your Zebra representative to open a Custom Product Request (CPR) if you would like to order this item.</p>	
-----------------	---	---	---	--

## Battery Charging

Part Number	Picture	Description	Notes	Required Items
SAC-TC8X-4SCHG-01		4-Slot Battery Charger	<p>► Charges up to four spare batteries.</p> <p>► Can be used standalone or up to four chargers can be installed on Multi-Slot Wall/Rack Mount Bracket (BRKT-SCRD-SMRK-01)</p>	<p><b>To power single 4-slot Charger:</b></p> <p>► Power Supply (PWR-BGA12V50W0WW)</p> <p>► DC Line Cord (CBL-DC-388A1-01)</p> <p>► AC Line Cord (23844-00-00R or country specific version)</p> <p><b>To power two sets of 4-slot Chargers from one power supply:</b></p> <p>► Power Supply (PWR-BGA12V108W0WW)</p> <p>► DC Y-Cable Line Cord (CBL-DC-523A1-01)</p> <p>► AC Line Cord (23844-00-00R or country specific version)</p>

## Charge/Communication Cables

Part Number	Picture	Description	Notes	Required Items
CBL-TC5X-USBC2A-01 or CBL-TC2Y-USBC90A-01		USB-C cable	<p>► USB-A to USB-C cable</p> <p>► Connects directly to USB-C port on RFD40 to charge device and allows the RFD40 to be used as a tethered RFID reader.</p> <p>► Cable length is 1M (~3.25 ft.)</p> <p>► CBL-TC2Y-USBC90A-01 features USB-A connector with a 90° bend allowing cable to be used in tighter locations. Cable length is about 1.1M (45").</p>	<p><b>For Charging:</b></p> <p>► order country specific version of USB Power Supply (PWR-WUA5V12W0xx)</p> <p>Note: Use of Zebra 6W USB power supply (PWR-WUA5V6W0WW) is not supported. Use above 12W power supply instead.</p>
CBL-TC2X-USBC-01		USB-C cable	<p>► USB-A to USB-C cable</p> <p>► Connects directly to USB-C port on RFD40 to charge device and allows the RFD40 to be used as a tethered RFID reader.</p> <p>► Cable length is 1.5M (~5 ft.)</p> <p>► This cable includes an additional ferrite bead and is typically used with TC25 devices.</p>	<p><b>For Charging:</b></p> <p>► order country specific version of USB Power Supply (PWR-WUA5V12W0xx)</p> <p>Note: Use of Zebra 6W USB power supply (PWR-WUA5V6W0WW) is not supported. Use above 12W power supply instead.</p>
3rd party *		USB-C cable	<p>► Connects directly to USB-C port on RFD40 to charge device and allows the RFD40 to be used as a tethered RFID reader.</p>	

25-124330-01R		Single Slot Cradle to PC/Host USB cable	<ul style="list-style-type: none"> <li>► Used with Single Slot ShareCradles</li> <li>► Micro USB connection on cradle end</li> </ul>	
CBL-RFD49-USB1-01		Snap-on USB Communication/Charging Cable	<ul style="list-style-type: none"> <li>► Attaches to charge/communicator port on bottom of RFD40/RFD90 and allows the RFD40/RFD90 to be used as a tethered RFID reader.</li> </ul>	<p><b>For Charging</b></p> <p>Option 1:</p> <ul style="list-style-type: none"> <li>► Power Supply (PWR-BGA12V50W0WW)</li> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00F or country specific version)</li> </ul> <p>Option 2:</p> <ul style="list-style-type: none"> <li>► order country specific version of USB Power Supply (PWR-WUA5V12W0xx)</li> </ul> <p>Note: Use of Zebra 6W USB power supply (PWR-WUA5V6W0WW) is not supported. Use above 12W power supply instead.</p>







## Device Adapters

eConnex™ adapters - holds host device on RFD40 and provides direct wired connection to RFD40

Part Number	Picture	Description	Notes	Required Items
ADP-RFD40-EC5X-1E		eConnex™ Adapter for EC50/EC55	<ul style="list-style-type: none"> <li>► Allows EC50/EC55 to be mounted on top of RFD40 and communicate directly to the reader.</li> <li>► Requires EC50/EC55 configuration with 8-Pin Connector Back I/O connector.</li> <li>► Adapter also allows both the RFD40 and EC50/EC55 to be docked as a pair in Single or Multi-Slot ShareCradles.</li> <li>► Compatible with devices using Standard or Extended Capacity batteries.</li> </ul>	
ADP-RFD40-TC2X-1E		eConnex™ Adapter for TC21/TC26	<ul style="list-style-type: none"> <li>► Allows TC21/TC26 to be mounted on top of RFD40 and communicate directly to the reader.</li> <li>► Requires TC21/TC26 configuration with 8-Pin Connector Back I/O connector.</li> <li>► Adapter also allows both the RFD40 and TC21/TC26 to be docked as a pair in Single or Multi-Slot ShareCradles.</li> <li>► Compatible with devices using Standard or Extended Capacity batteries.</li> <li>► Not compatible with devices with Protective Boot installed.</li> </ul>	





ADP-RFD40-TC2X-2E		eConnex™ Adapter for TC22/TC27	<ul style="list-style-type: none"> <li>► Allows TC22/TC27 to be mounted on top of RFD40 and communicate directly to the reader.</li> <li>► Requires TC22/TC27 configuration with 8-Pin Connector Back I/O connector.</li> <li>► Adapter can charge the TC22/TC27 via the eConnex connector when the RFD40 is docked in one of its Universal/3rd Party cradles or Snap-On Charge Cable (CBL-RFD49-USB1-01).</li> <li>► Compatible with devices using Standard or Extended Capacity batteries.</li> <li>► Compatible with devices with Handstrap installed.</li> <li>► Not compatible with devices with Protective Boot installed.</li> <li>► Adapter provides additional options to support pass-through charging the TC22/TC27 via eConnex connection using: <ul style="list-style-type: none"> <li>- Snap-On Cable (CBL-RFD49-USB1-01) and 12V Power Supply (PWR-BGA12V50W0WW) or</li> <li>- Universal/3rd Party ShareCradle (i.e. CRD1S0T-RFD49-UNIV-COM-1R)</li> </ul> </li> </ul>	
ADP-RFD40-TC5X-1E (e-Connex sled for direct wired connection from TC52ax with SE4720 scan engine to RFD40)  ADP-RFD40-TC5X-0E (e-Connex sled for direct wired connection from TC52ax with SE55 scan engine to RFD40)		eConnex™ Adapter for TC52ax	<ul style="list-style-type: none"> <li>► Allows TC52ax to be mounted on top of RFD40 and communicate directly to the reader.</li> <li>► Adapter also allows both the RFD40 and TC52ax to be docked as a pair in Single or Multi-Slot ShareCradles.</li> <li>► Not compatible with other TC5X configurations which don't have the 8-Pin rear I/O connector or the TC53/TC58 series.</li> </ul>	<p><u>For TC52ax with SE4720 scan engine:</u></p> <ul style="list-style-type: none"> <li>► Rugged Boot/Exoskeleton without handstrap (SG-TC5X-EXONHS-01).</li> </ul> <p>Rugged Boot/Exoskeleton with handstrap (SG-TC5X-EXO1-01) can also be used, but the handstrap will need to be removed before using with the trigger handle.</p> <p><u>For TC52ax with SE55 scan engine:</u></p> <ul style="list-style-type: none"> <li>► Rugged Boot/Exoskeleton with handstrap (SG-TC52AX-EXOLOL-01 or SG-TC52AX-LORGB-01) - handstrap will need to be removed before using with the trigger handle.</li> </ul>
ADP-RFD40-TC5X-2E		eConnex™ Adapter for TC53/TC58	<ul style="list-style-type: none"> <li>► Allows TC53/TC58 series to be mounted on top of RFD40 and communicate directly to the reader.</li> <li>► Adapter also allows both the RFD40 and TC53/TC58 to be docked as a pair in Single or Multi-Slot ShareCradles.</li> <li>► Compatible with devices using Standard or Extended Capacity batteries.</li> <li>► Compatible with devices with Hand Strap attached.</li> <li>► Also compatible with TC53e-RFID units.</li> <li>► Not compatible with legacy TC5X series devices.</li> <li>► Adapter provides additional options to support pass-through charging the TC53/TC58 via eConnex connection using: <ul style="list-style-type: none"> <li>- Snap-On Cable (CBL-RFD49-USB1-01) and 12V Power Supply (PWR-BGA12V50W0WW) or</li> <li>- Universal/3rd Party ShareCradle (i.e. CRD1S0T-RFD49-UNIV-COM-1R)</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>► Rugged Boot/Exoskeleton (SG-NGTC5EXO1-01)</li> </ul>



<p>3PTY-PCLIP-216391</p> <p>NOTE: Products sold that do not bear the Zebra brand name are serviced and supported exclusively by their manufacturers in accordance with terms and conditions packaged with the products. Zebra's Limited Warranty does not apply to products that are not Zebra branded, even if packaged or sold with Zebra products. Please contact the manufacturer directly for technical support and customer service. See PMB 11136 for more info.</p>		<p>ProClip Sled Adapter for iPhone and Otterbox uniVERSE case</p>	<p>► Allows iPhones with Otterbox uniVERSE case to be mounted on top of RFD40 and communicate via eConnex/Lightning connector to the reader.</p> <p>► Adapter provides pass-through charging for the iPhone using one of the following:</p> <ul style="list-style-type: none"> <li>- Snap-On Cable (CBL-RFD49-USB1-01) and 12V Power Supply (PWR-BGA12V50W0WW) or</li> <li>- Universal/3rd Party ShareCradle (i.e. CRD1S0T-RFD49-UNIV-COM-1R)</li> </ul>	
<p>3PTY-PCLIP-216390</p> <p>NOTE: Products sold that do not bear the Zebra brand name are serviced and supported exclusively by their manufacturers in accordance with terms and conditions packaged with the products. Zebra's Limited Warranty does not apply to products that are not Zebra branded, even if packaged or sold with Zebra products. Please contact the manufacturer directly for technical support and customer service. See PMB 11136 for more info.</p>		<p>ProClip Sled Adapter for Samsung Xcover Pro and Otterbox uniVERSE case</p>	<p>► Allows Xcover6 Pro with Otterbox uniVERSE case to be mounted on top of RFD40 and communicate via eConnex/USB-C connector to the reader.</p> <p>► Adapter provides pass-through charging for the Xcover Pro using one of the following:</p> <ul style="list-style-type: none"> <li>- Snap-On Cable (CBL-RFD49-USB1-01) and 12V Power Supply (PWR-BGA12V50W0WW) or</li> <li>- Universal/3rd Party ShareCradle (i.e. CRD1S0T-RFD49-UNIV-COM-1R)</li> </ul>	
Bluetooth adapters - holds host device on RFD40 and allows for Bluetooth connection to RFD40				
Part Number	Picture	Description	Notes	Required Items
ADP-RFD40-EC5X-1R		<p>Bluetooth Sled Adapter for EC5X series</p> 	<p>► Allows EC5X series devices to be mounted on top of RFD40 and communicate via Bluetooth to the reader.</p> <p>► Adapter also allows both the RFD40 and EC5X to be docked as a pair in Single or Multi-Slot ShareCradles.</p> <p>► Requires Premium or Premium Plus version of RFD40 (supports Bluetooth communication)</p> <p>► Compatible with devices using Standard or Extended Capacity batteries.</p>	

ADP-RFD40-TC2X-1R		Bluetooth Sled Adapter for TC21/TC26 Standard 	<ul style="list-style-type: none"> <li>► Allows TC21/TC26 standard configs to be mounted on top of RFD40 and communicate via Bluetooth to the reader.</li> <li>► Adapter also allows both the RFD40 and the TC device to be docked as a pair in Single or Multi-Slot ShareCradles.</li> <li>► Requires Premium or Premium Plus version of RFD40 (supports Bluetooth communication).</li> <li>► Compatible with devices using Standard or Extended Capacity batteries.</li> <li>► Not compatible with devices with Protective Boot installed.</li> <li>► Not compatible with Healthcare versions of TC21/TC26, use ADP-RFD40-TC2X-1H instead.</li> </ul>	
ADP-RFD40-TC2X-1H		Bluetooth Sled Adapter for TC21/TC26 Healthcare 	<ul style="list-style-type: none"> <li>► Allows TC21/TC26 Healthcare configs to be mounted on top of RFD40 and communicate via Bluetooth to the reader.</li> <li>► Adapter also allows both the RFD40 and the TC device to be docked as a pair in Single or Multi-Slot ShareCradles.</li> <li>► Requires Premium or Premium Plus version of RFD40 (supports Bluetooth communication)</li> <li>► Not compatible with Standard (non-Healthcare) versions of TC21/TC26, use ADP-RFD40-TC2X-1R instead.</li> <li>► Not compatible with devices with Protective Boot installed.</li> </ul>	
ADP-RFD40-TC2X-2R		Bluetooth Sled Adapter for TC22/TC27 or HC20/HC50 	<ul style="list-style-type: none"> <li>► Allows TC22/TC27 or HC20/HC50 to be mounted on top of RFD40 and communicate via Bluetooth to the reader.</li> <li>► Adapter also allows both the RFD40 and the TC/HC device to be docked as a pair in Single or Multi-Slot ShareCradles.</li> <li>► Requires Premium or Premium Plus version of RFD40 (supports Bluetooth communication).</li> <li>► Compatible with devices using Standard or Extended Capacity batteries.</li> <li>► Not compatible with devices with Protective Boot installed.</li> </ul>	













ADP-RFD40-TC5X-0R		Bluetooth Sled Adapter for TC51/TC52/TC56/TC57 series 	<ul style="list-style-type: none"> <li>► Allows TC5X to be mounted on top of RFD40 and communicate via Bluetooth to the reader.</li> <li>► Adapter also allows both the RFD40 and TC5X to be docked as a pair in Single or Multi-Slot ShareCradles.</li> <li>► Requires Premium or Premium Plus version of RFD40 (supports Bluetooth communication)</li> <li>► Compatible with all generations of TC5X (except TC53/TC58 and TC55) - includes TC51, TC52, TC52x, TC52ax, TC56, TC57, TC57x - Healthcare versions included.</li> <li>► Does not support TC52ax units with SE55 Advanced Range Imager due to longer length of device.</li> </ul>	<ul style="list-style-type: none"> <li>► TC5X Rugged Boot/Exoskeleton without handstrap (SG-TC5X-EXONHS-01).</li> <li>Rugged Boot/Exoskeleton with handstrap (SG-TC5X-EXO1-01) can also be used, but the handstrap will need to be removed before using with the trigger handle.</li> </ul>
ADP-RFD40-BT-1R		Bluetooth Sled Adapter for Otterbox uniVERSE cases 	<ul style="list-style-type: none"> <li>► Allows devices with Otterbox uniVERSE cases to be mounted on top of RFD40 and communicate via Bluetooth to the reader.</li> <li>► Requires Premium or Premium Plus version of RFD40 (supports Bluetooth communication)</li> </ul>	
3PTY-PCLIP-216278  NOTE: Products sold that do not bear the Zebra brand name are serviced and supported exclusively by their manufacturers in accordance with terms and conditions packaged with the products. Zebra's Limited Warranty does not apply to products that are not Zebra branded, even if packaged or sold with Zebra products. Please contact the manufacturer directly for technical support and customer service. See PMB 11136 for more info.		ProClip Adjustable Adapter Sled Adapter	<ul style="list-style-type: none"> <li>► Allows consumer devices to attach to top of RFD40.</li> <li>► Uses spring loaded arm to adjust to hold a wide variety of devices.</li> </ul>	
Misc device adapter accessories				
Part Number	Picture	Description	Notes	Required Items

ADP-RFD40-BLNK-1R		Replacement Blank Cover for eConnex™ Adapter Slot	<ul style="list-style-type: none"> <li>► This is a spare/replacement cover that typically ships with each RFD40 unit.</li> <li>► Cover snaps into place on RFD40 unit.</li> </ul>	
SG-RFD40-ADPSCRWS-01		Replacement Screws for Adapters	<ul style="list-style-type: none"> <li>► Includes four screws which are included with each eConnex™ Adapter or Bluetooth Sled Adapter.</li> </ul>	
Soft Goods - Cases/Holsters/Holders				
Part Number	Picture	Description	Notes	Required Items
SG-RFD40-HLSTR1-01		<p>Rigid Holster with Belt Clip</p>  	<ul style="list-style-type: none"> <li>► Holster secures the device to most belts.</li> <li>► Includes belt clip, does not include belt.</li> <li>► Belt clip will rotate the RFD40 so the handle points down or slightly forward. This ensures an easy grip on the handle of the RFD40.</li> <li>► Belt clip features a wide press button at the top that enables it to be used one handed to easily remove the RFD40 when needed.</li> <li>► Supports RFD40 with device adapters (i.e. TC21/TC26, TC5X, etc.)</li> </ul>	 

MNT-RFD49-UNPWR-01		Passive (non-charging) Holder (Drop-in Style) 	<ul style="list-style-type: none"> <li>► This is a light duty, quick and easy, one handed, top drop in style holder.</li> <li>► Uses four mounting screws with AMPSS - additional mounting hardware required.</li> <li>► Requires Rigid Holster (SG-RFD40-HLSTR1-01) to be installed on device.</li> <li>► Supports RFD40 with device adapters (i.e. TC21/TC26, TC5X, etc.)</li> </ul>	► Rigid Holster (SG-RFD40-HLSTR1-01)
--------------------	---	---	--	--------------------------------------

#### Power Cords/Power Supplies

Part Number	Picture	Description	Notes	Required Items
CBL-DC-388A1-01		DC Power Cord	<ul style="list-style-type: none"> <li>► Used along with Power Supply PWR-BGA12V50W0WW to power Single Slot ShareCradles, Spare Battery Charger or Snap-On Cable (CBL-RFD49-USB1-01).</li> <li>► Cable length is 1.8 meters</li> </ul>	
PWR-BGA12V50W0WW		Power Supply	<ul style="list-style-type: none"> <li>► Used to power to power Single Slot ShareCradles, Spare Battery Charger or Snap-On Cable (CBL-RFD49-USB1-01).</li> <li>► 100-240 VAC, 12V, 4.16A, 50W</li> <li>► Provides US DOE Level VI compliance for power efficiency.</li> <li>► Replaces PWRS-14000-148R and PWRS-14000-148C</li> </ul>	<ul style="list-style-type: none"> <li>► DC Line Cord (CBL-DC-388A1-01)</li> <li>► AC Line Cord (23844-00-00F or country specific version)</li> </ul>
KIT-PWR-12V50W		Power Supply Kit	<ul style="list-style-type: none"> <li>► Includes Power Supply (PWR-BGA12V50W0WW) and DC Line Cord (CBL-DC-388A1-01)</li> <li>► Used to power Single Slot ShareCradles, Spare Battery Charger or Snap-On Cable (CBL-RFD49-USB1-01).</li> </ul>	► AC Line Cord (23844-00-00F or country specific version)
CBL-DC-381A1-01		DC Power Cord	<ul style="list-style-type: none"> <li>► Used with Power Supply PWR-BGA12V108W0WW to power Multi-Slot ShareCradles.</li> <li>► This cable does not include the black extension release latch which is not required when used on Multi-Slot ShareCradles.</li> </ul>	
CBL-DC-382A1-01		DC Power Cord	<ul style="list-style-type: none"> <li>► Used with Power Supply PWR-BGA12V108W0WW to power Multi-Slot ShareCradles.</li> <li>► Cable has black extension tab for releasing the cable from the back of the cradle. This isn't required when using Multi-Slot ShareCradles.</li> <li>► NOTE: CBL-DC-381A1-01 is the recommended cable to be used.</li> </ul>	

CBL-DC-523A1-01		2-Way DC Y Power Cord	► Used to power two 4-Slot Battery Chargers from one Power Supply (PWR-BGA12V108W0WW)	
CBL-DC-380A1-01		4-Way Power Cable	► Used with Power Supply PWR-BGA12V108W0WW for powering up to four Single Slot Cradles.	
PWR-BGA12V108W0WW		Power Supply	► Used to power Multi-Slot ShareCradles. ► 100-240 VAC, 12V, 9A, 108W ► Provides US DOE Level VI compliance for power efficiency. ► Replaces PWRS-14000-241R	► DC Power Cable (CBL-DC-382A1-01) or 4-Way Power Cable (CBL-DC-380A1-01) ► AC Line Cord (23844-00-00F or country specific version)
23844-00-00R		AC Line Cord	► This AC Line Cord is for use in North America. See the <b>AC Line Cords by Country</b> TAG for comparable line cords to use in other countries.	
PWR-WUA5V12W0US (US plug style) PWR-WUA5V12W0GB (UK plug style) PWR-WUA5V12W0EU (EU plug style) PWR-WUA5V12W0AU (Australia plug style) PWR-WUA5V12W0CN (China plug style) PWR-WUA5V12W0IN (India plug style) PWR-WUA5V12W0KR (Korea plug style) PWR-WUA5V12W0BR (Brazil plug style) PWR-WUA5V12W0LA (Argentina/Chile/Mexico plug styles)		USB Power Supply	► Provides higher current (2.5A) for faster charging ► 100-240 VAC, 5 V, 2.5 A	► USB-C Cable if charging via the RFD40's USB-C port - or - ► Snap-On Charge/Communication Cable (CBL-RFD49-USB1-01)

## Batteries

Part Number	Picture	Description	Notes	Required Items
BTRY-RFD49-70MA1-01 BTRY-RFD49-70MA1-IN (for India)		RFD40/RFD90 Spare/Replacement Battery (7000 mAh) with PowerPrecision <b>Plus</b> 	► This is the standard battery that is included with each RFD40 unit. Battery is also compatible with RFD90. ► Provides 8 hours of continuous usage. ► Battery is same form factor as TC8X series devices, but is labeled differently for regulatory compliance. TC8X series batteries should not be used in the RFD40.	
SG-RFD40-LOCKFT-01		Battery Locking Foot	► Foot screws onto bottom of device to prevent battery from being removed. 	